


# ddrum<sup>®</sup>

## D-lite

### ELECTRONIC DRUM SET USER MANUAL

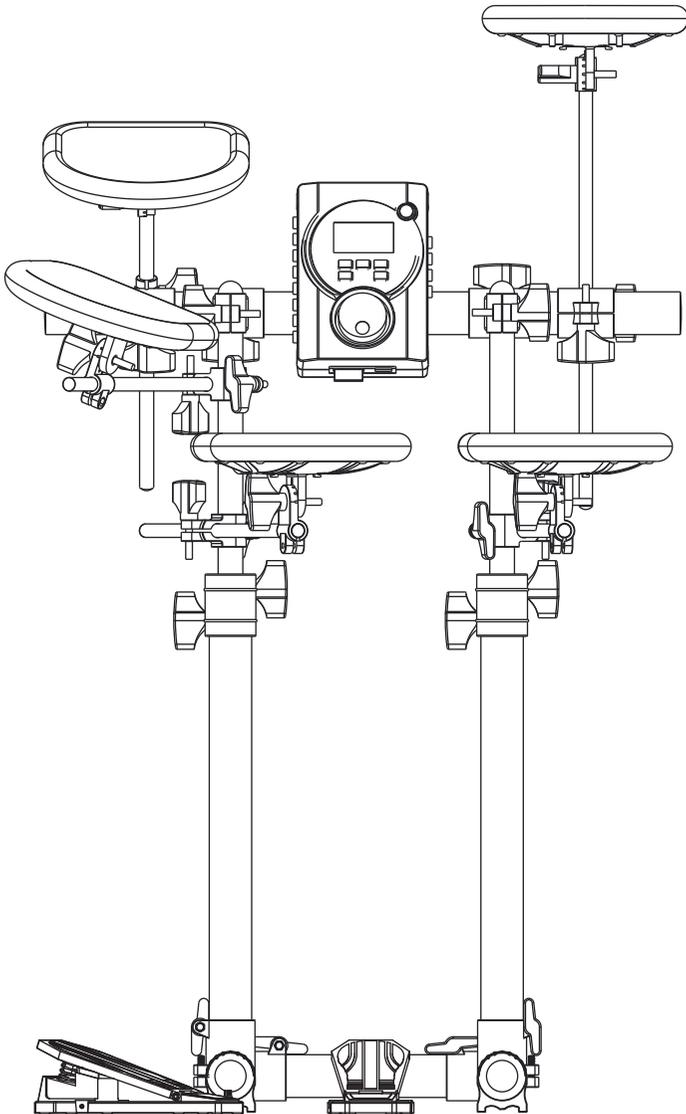

---

# Operation Warning

Instruction for Prevention of Fire, Electric Shock, & Physical Injury

---

## About Warning & Caution Signs

<b>WARNING</b>	This sign indicates the risk of serious physical injury or even death. Please operate the machine according to instructions.
<b>CAUTION</b>	This sign indicates the risk of serious physical injury and even death. Please operate the machine according to instructions.  *Object damage refers to any harm or adverse effects to household, furniture, pets, and etc.

## About Signs

	This sign indicates a warning or caution. Please read the accompanied instruction to prevent any dangers.
	This sign indicates any forbidden activity.
	This sign indicates an instructional procedure for users to follow with.

**ALWAYS FOLLOW THE INSTRUCTIONS AS DESCRIBED BELOW**

## WARNING

Please read the following instruction before operation.



Do not open or, in any way, modify the machine or adapter.



Do not attempt to repair the machine, or replace any internal parts by yourself, unless instructed to do so by the manual. In case of technical need, please contact with your retailer, or their customer service, or any recognized retailers printed on the information page.



Do not store or operate the machine under the following described conditions:

- Near areas with extreme temperature. (For example, in the car under the sun, near a heat venting pipe, and etc.)
- In very humid environments. (For example, in the bathroom, in the toilet, on wet floor, and etc.)
- Exposing to rain.
- In the sand.
- In shaking & unstable environments.



Operate the machine with the recommended support stands and accessories only.



For proper operation, make sure that the support stands are placed on flat and stable ground in order to support the machine safely and stably.



## WARNING

Use only the included adapter. Make sure that the voltage of the socket matches the voltage indicated on your adapter to prevent damage or electric shock.



Please do not over-twist or over-bend the power cable, or place any objects on it. Doing so may result in short-circuit that can lead to fire and electric shock.



Please do not operate the machine with high volume over a long period of time regardless of using an amplifier or a headphone, to prevent damage to your hearing. Should any hearing discomfort results, stop using the machine and consult a hearing doctor.



Prevent letting any object like coins or pins, or any liquid slip inside the machine.



## WARNING

Should any of the following situations result, please stop operation and remove the adapter from the socket, and consult with your retailer, the nearest customer service, or any of the recognized retailers listed on the information page:

- The adapter or the power cable is damaged.
- An object, or liquid has slipped into the interior of the machine.
- The machine has been exposed in rain, or has got wet.
- The machine is not operating or is operating with noticeable problems.



If there were children in the household, the adults should be responsible of ateaching the children to follow the safety precautions explained in the manual.



Do not share the power supply with too many adapters at the same time. When using an extension power supply, please make sure that the total power usage does not exceed the limit stated on the extension power supply. Doing so may result in melting of the cables and fire.



When using the machine in other countries, please consult your retailer, the nearest customer service, or any of the recognized retailers listed on the information page.



## CAUTION

Always place the machine and the adapter in areas with good airflow.



When inserting or removing the power cable into/from the socket or the machine, always grab the plug instead of the cable.



If you plan not to operate the machine for a long period of time, please remove the adapter from the socket.



To prevent the cables from tangling, place the cables out of reach of children.



Do not place heavy objects on the machine.



When moving the machine, or during insertion/removal of the plug, always use dry hands.



Please turn off the power and remove the adapter from the socket before cleaning the machine.



When there is a risk of lightning strike, please remove the adapter from the socket.



---

# Precautions

---

Please read the following precautions aside from the safety instructions

## Power Supply

- Do not share the power supply with other electronics that can produce cable statics, for example, electric motors.
- It is normal for direct current (DC) to produce heat with extended usage, and there is no need to be worried.
- Before connecting the machine to other equipments, always turn off the power to prevent damage.

## Placement/Location

- Operating the machine near a post-amplifier or machines that use high-power converters, buzzing may result. To prevent this problem, please change the machine's facing direction, or place the machine away from the interrupting sources.
- This machine may interfere with the radios and televisions. Please do not operate the machines near them.
- Do not place the machine under sun, or near any heat source, as high temperature may cause the machine to deform or discolor.
- To prevent permanent damage, please do not expose the machine to moist or in humid environments.

## Maintenance

- For normal cleaning, please use soft cloth with little or no moist for wiping. For tougher spots, use neutral-pH and wear-free cleaner then use dry soft cloth to wipe clean.
- Never use volatile oil, diluting solutions, alcohol, or any other kinds of solvents to prevent the machine from deforming or discoloring.

## Additional Precautions


- During operation, please handle with care to prevent any damage.
- Do not hit or press against the display screen.
- Always grab the heads of cables during insertion/removal to prevent damage to the cables or the machine.
- To prevent disturbing your neighbors, please operate the machine at an acceptable volume, or use a headphone, especially at nights.
- Although the machine is designed to minimize unwanted noise during operation, the percussive sound may still pass through the floor or walls, resulting in unexpected noise. Please be careful not to let such sound disturb your neighbors, especially at nights.
- When transporting the machine, please use the original or similar stuffing and box.
- Please use official cables for connection. When using cables from other companies, please note the following:  
  
Some cables may consist of resistors, which may be incompatible and result in extremely low volume. For information about the specifications of cables, please consult with the manufacturers.

- Please do not hit the pads with excessive force to prevent the risk of hurting your fingers.

# Accessories

**A1**

Sound Module  
MS310

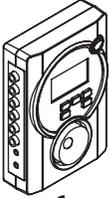

x1

**A2**

Pad



x5

**A3**

Hi-Hat  
Controller



x1

**A4**

Bass Drum  
Controller



x1

**B1**

Drum Stick  
(1 set)



x1

**B2**

User  
Manual



x1

**B3**

Cable Tie



x2

**L1**

Adapter



x1

**L2**

L-L Mono  
Sound  
Cable  
(Black)  
L:100 cm



x4

**L3**

L-L Mono  
Sound  
Cable  
(Black)  
L:150 cm



x2

**L4**

L-L Stereo  
Sound  
Cable  
(Red)



x1

# Parts

**P1**

Floor Pad



x4

**P2**

Ø3.81 (cm)  
Stopper



x2

**P3**

Ø2.22 (cm)  
Stopper



x2

**P4**

Wing-Bolt



32+2

**P5**

Nut



32+2

# Connectors

**C1**

Ø3.81 - Ø2.22  
Adjustable  
Connector



**x2**

**C2**

Ø1.27 Pad  
Connector



**x5**

**C3**


Ø3.81 - Ø1.27  
Connector



**x2**

**C4**

Ø1.27 - Ø2.22  
Connector

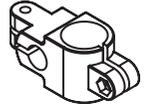

**x3**

**C5**

Ø3.81 - Ø2.22  
Connector



**x2**


**C6**

Ø3.81(cm)  
U-shape Plate &  
Double Screws




**x1**

# Support Stand

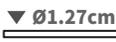
<b>S1</b>	▼ Ø3.81cm 	40 cm x1	
<b>S2</b>	▼ Ø3.81cm 	20 cm x1	
<b>S3</b>	▼ Ø3.81cm 	40 cm x1	
<b>S4</b>	▼ Ø3.81cm  (Red)	40 cm x2	
<b>S5</b>	▼ Ø2.22cm 	40 cm x2	
<b>S6</b>	▼ Ø3.81cm  (Red)	57 cm x1	
<b>S7</b>	▼ Ø1.27cm 	40 cm x4	
<b>S8</b>	▼ Ø1.27cm 	20 cm x1	

# Connectors



C1

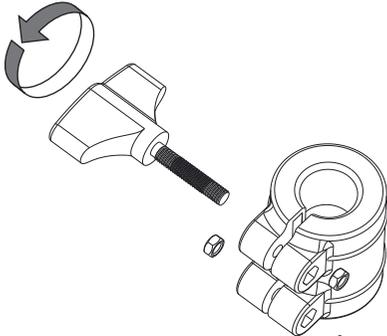


C3

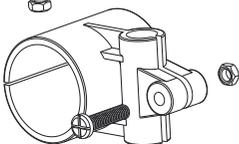


C2

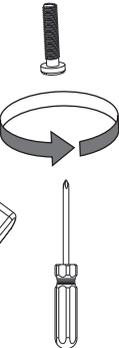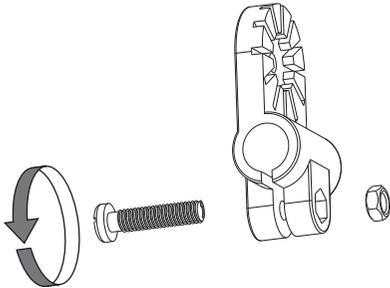




**Expansion**

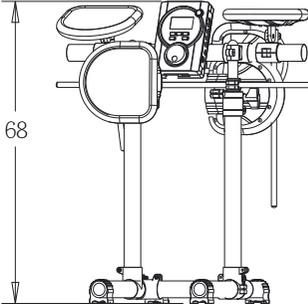

**C4**

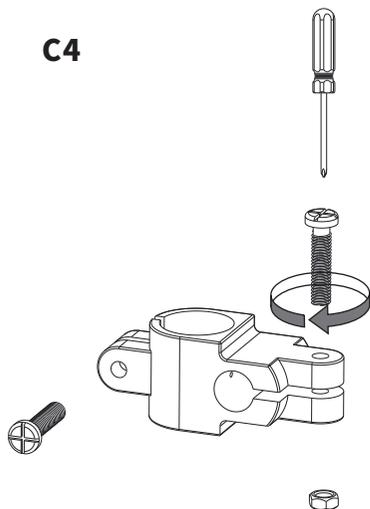

**C5**

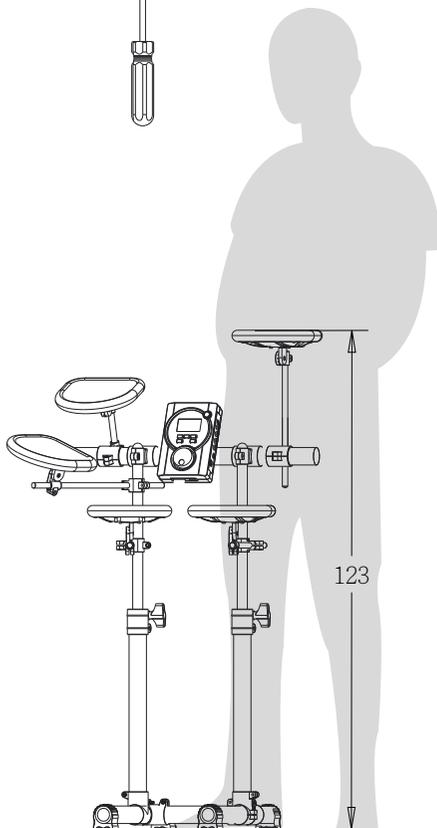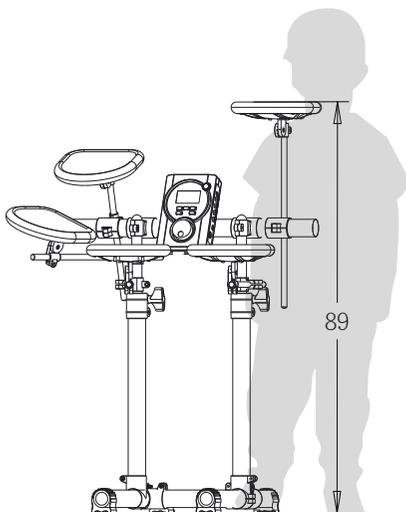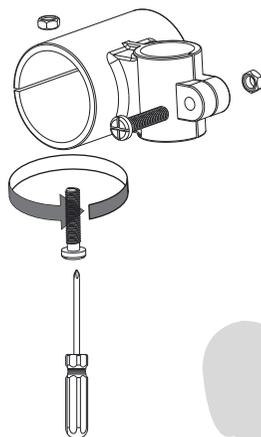



# Step 1

**S1**  Ø3.81cm (40cm) **x1 (left)**


**S2**  Ø3.81cm (20cm) **x1 (center)**

**S3**  Ø3.81cm (40cm) **x1 (right)**

**P1**  **x4**

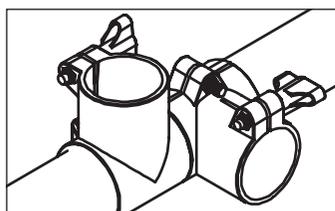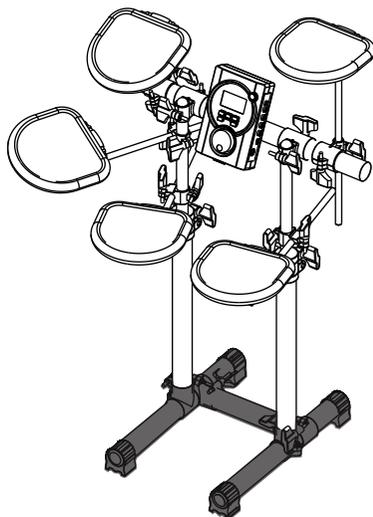



**S1** 40cm


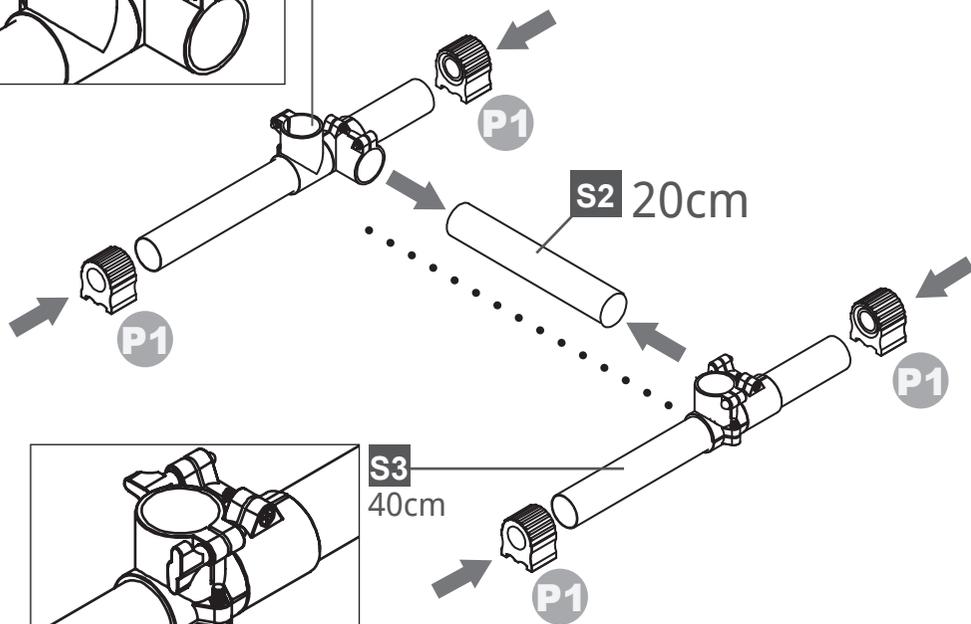


**S2** 20cm

**S3** 40cm

## Step 2

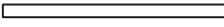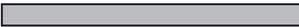
- S4**  Ø3.81cm (Red) (40cm) **x2**
- S5**  Ø2.22cm (40cm) **x2**
- S6**  Ø3.81cm (Red) (57cm) **x1**

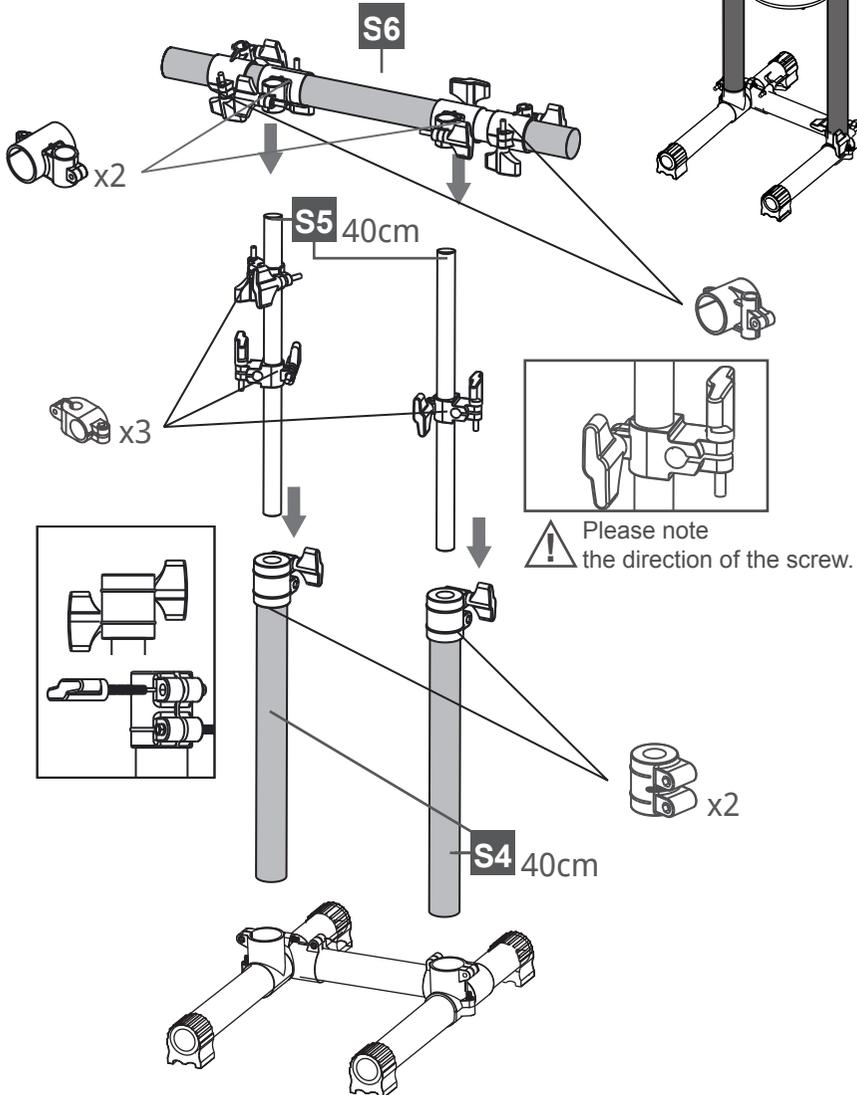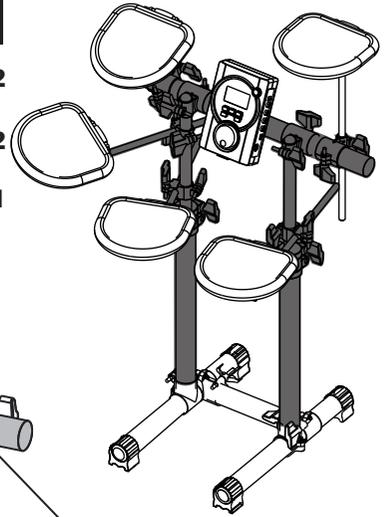

# Step 3

S7

(40cm) x3

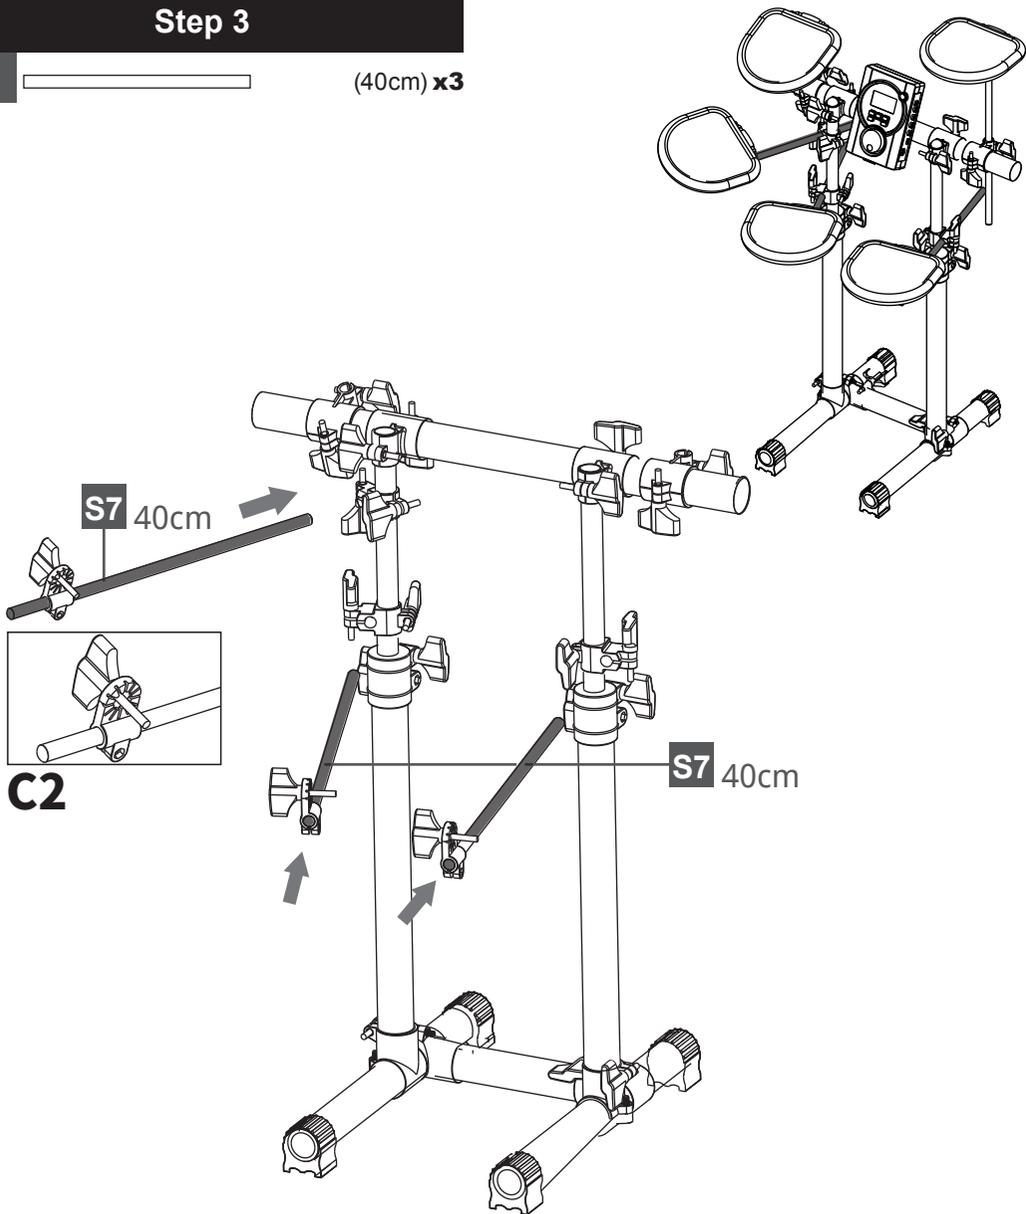



## Step 4

**S7**  (40 cm) **x1 (right)**

**S8**  (20 cm) **x1 (left)**



**P2**  **x2**

**P3**  **x2**

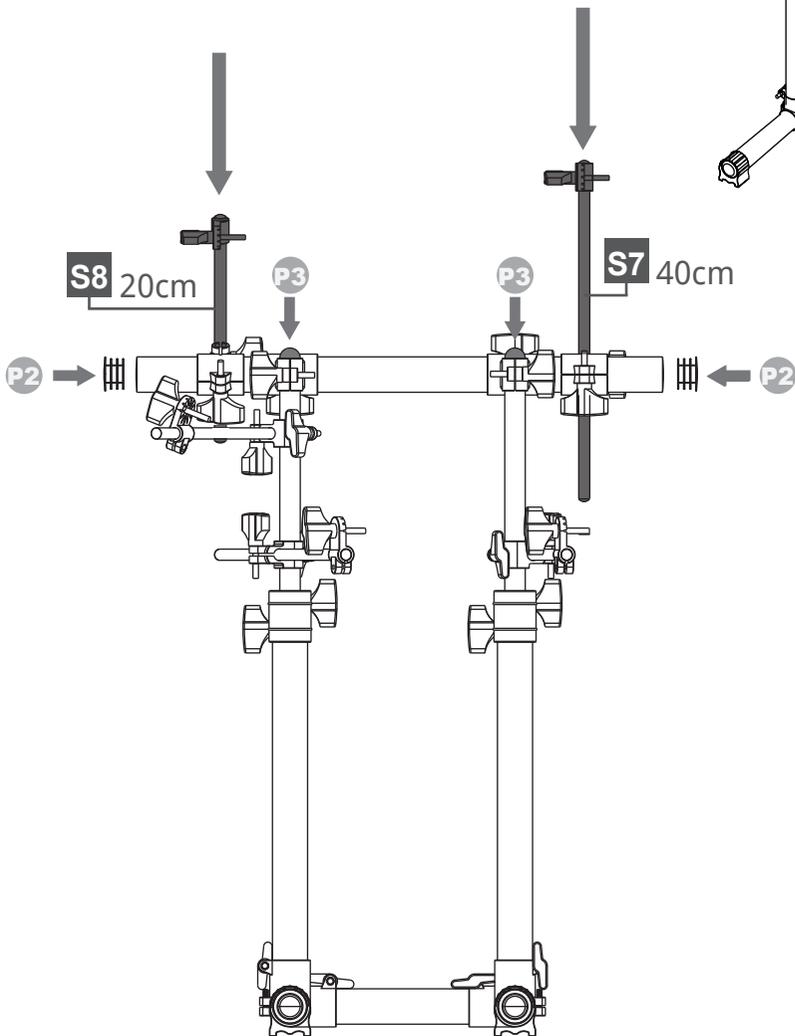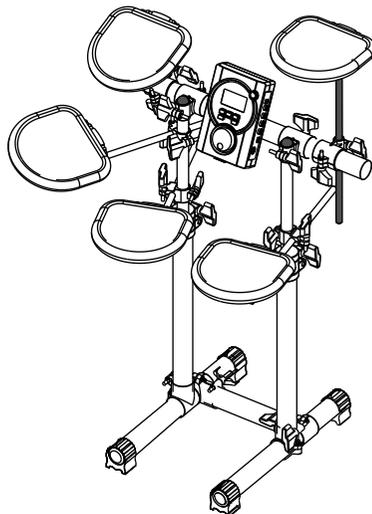


# Step 5

- A2 x5
- T1 x10
- T2 x10
- C2 x5

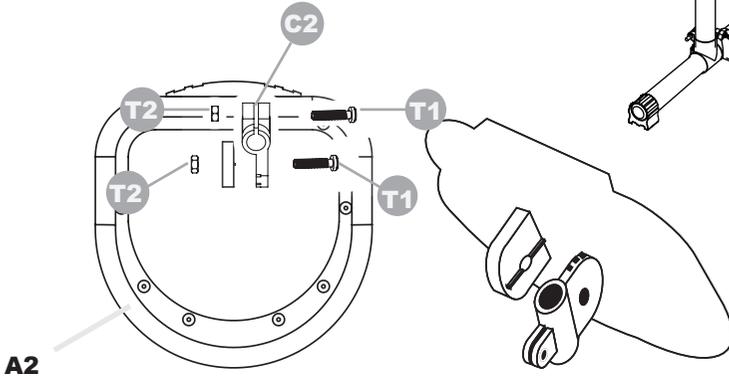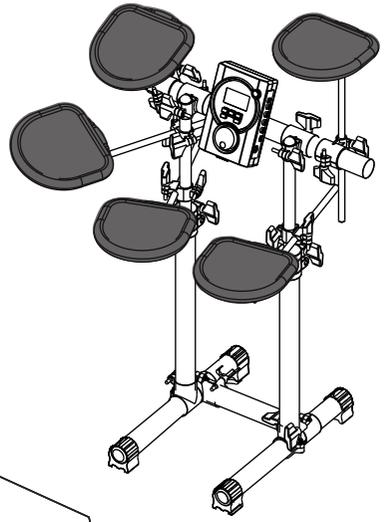

Below are examples of wrong assembly.

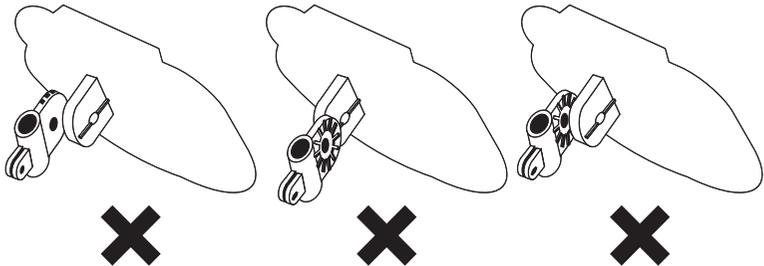

**NOTE** Use L2 (100cm black cable) connect

## Mounting on the stand

A1



x1

C6





x1


Position the Sound Module onto the Bar and fold the U-Shape Plate upwards around the bar.

Secure the U-Shape Plate to the back of the Sound Module with Screws.



Remove the protective film.

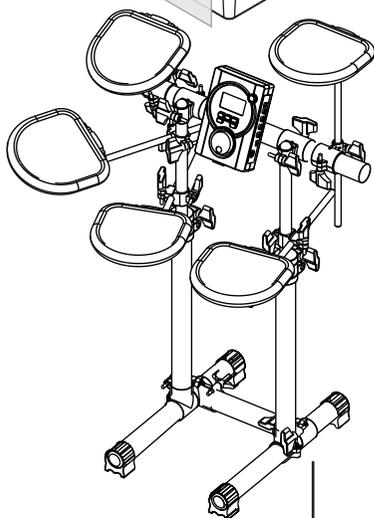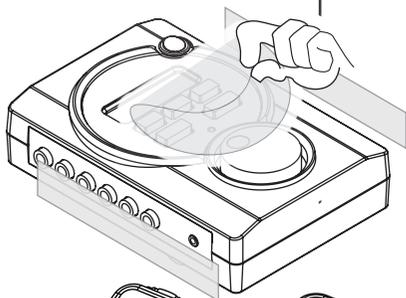

A1

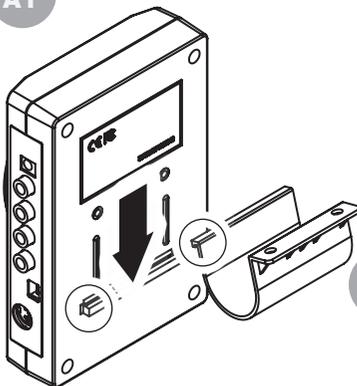

C6

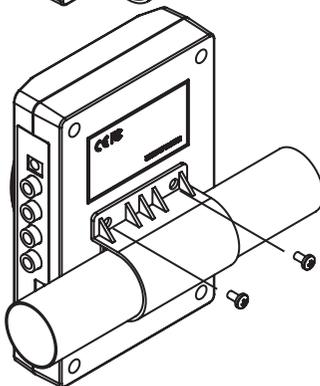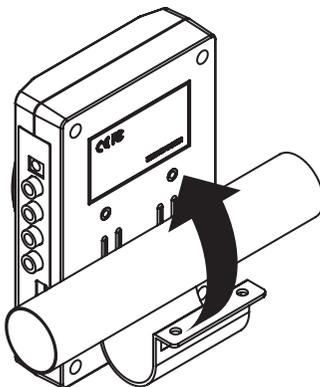

## Sound Cable

L2



(Black)

x4

L3



(Black)

x2

L3




(Red)

x1




**L2**  
(Black)

- ① HI-HAT
- ② SNARE
- ③ TOM1
- ⑧ TOM2

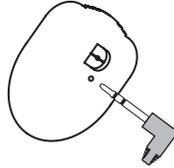

**L4** ⑦ CYMBAL 2  
(Red)

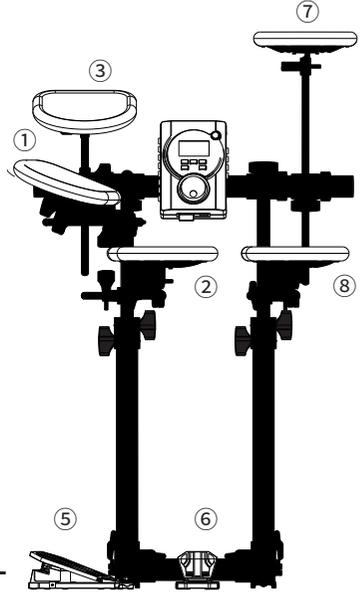


Connect the Sound Cables to the Drum Pads, Pedals and Sound Module.

Mono cable (one black line)



Stereo cable (two black lines)

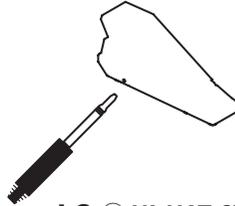

**L3** ⑤ HI-HAT CTRL  
(Black) ⑥ BASS DRUM CTRL

## Controller

A3





x1

A4



x1


**A3**

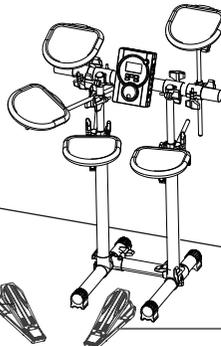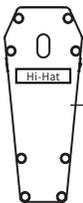

**A4**




# Conecting the Pads

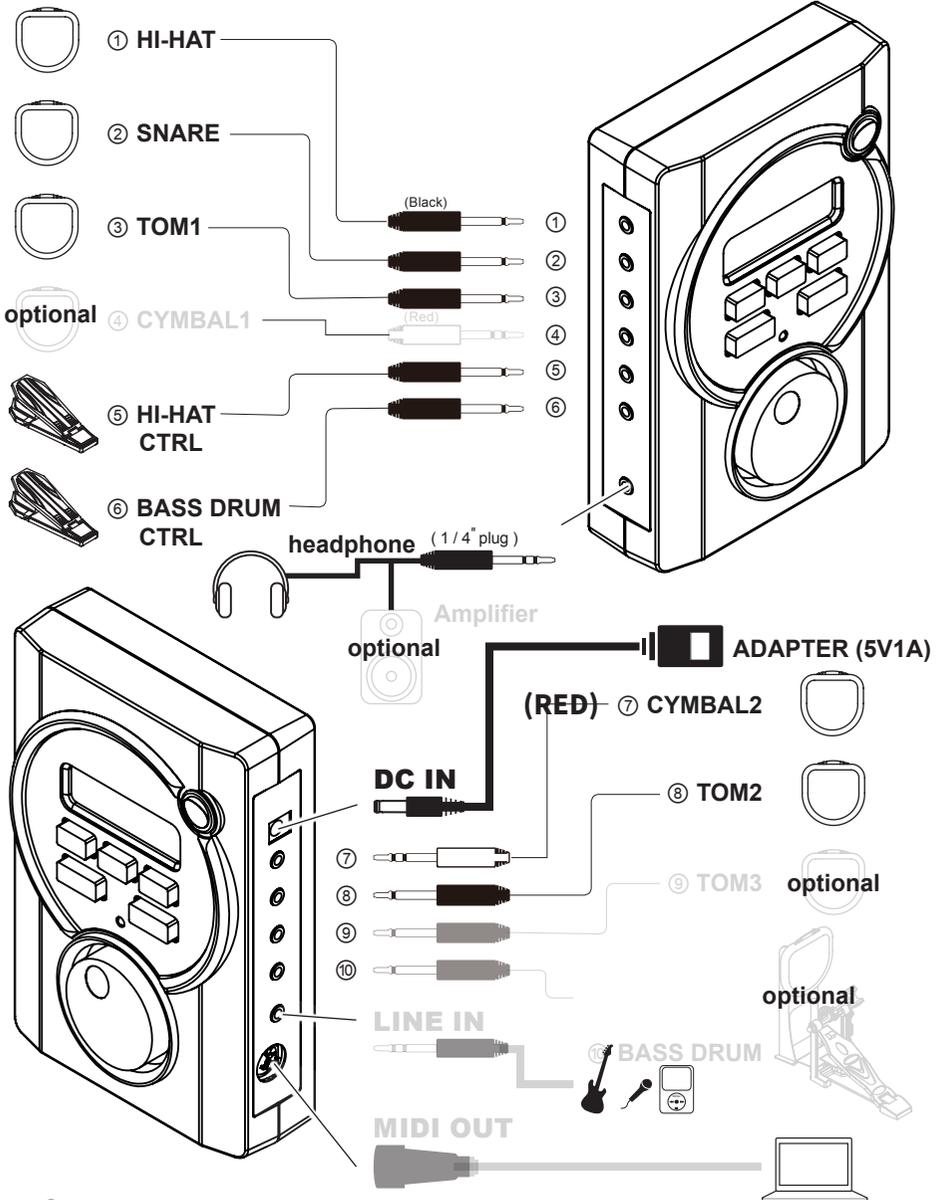

NOTE ④ CYMBAL1 and ⑦ CYMBAL2 must use Stereo Sound Cables (red, 2 parallel black lines at the tip) for connection to the Sound Module.

NOTE To prevent damage to speakers, always turn down the volume before inserting or removing sound cables.

# Console Control Introduction

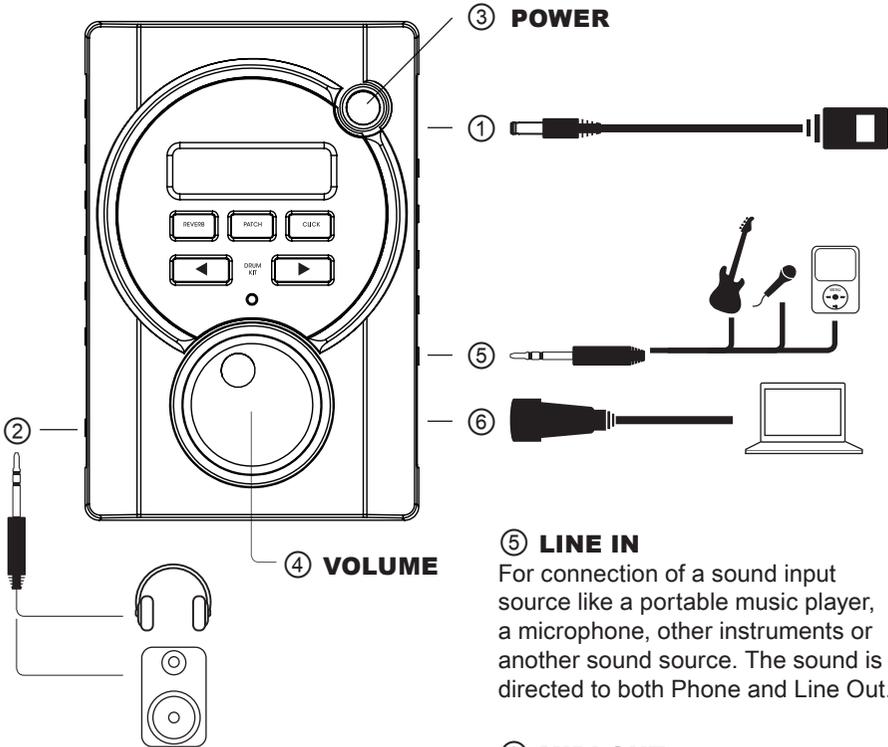

## ① DC IN

For connection of the power adapter. Adapter must be 5V1A

## ② PHONES

For connection of a headphone.

## ③ POWER

Switch power on/off.

## ④ VOLUME

For adjusting the system volume

## NOTE

To prevent damage to speakers, always turn down the volume before inserting or removing sound cables.

## ③ POWER



## ⑤ LINE IN

For connection of a sound input source like a portable music player, a microphone, other instruments or another sound source. The sound is directed to both Phone and Line Out.

## ⑥ MIDI OUT


For connection of a sound input source like a portable music player, a microphone, other instruments or another sound source. The sound is directed to both Phone and Line Out.

## About MIDI



MIDI (Musical Instrument Digtible Interface) is an industry-standard protocol that enables electronic musical instruments, computers, and other equipment to communicate, control, and synchronize with each other. MIDI allows computers, synthesizers, MIDI controllers, sound cards, samplers and drum machines to control one another, and to exchange system data.

# Console Operation

## Percussion Sound Module

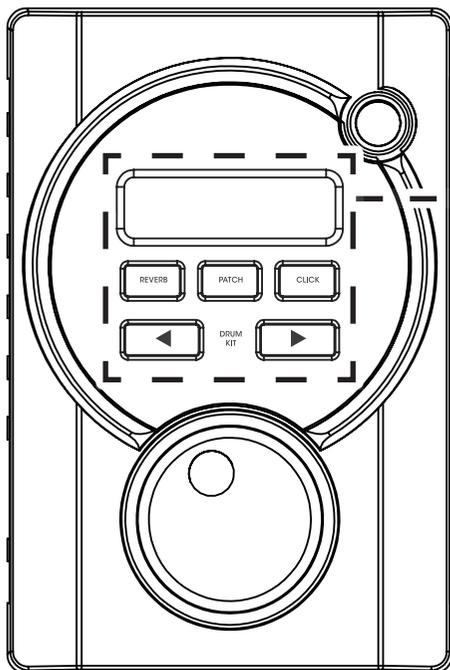


Percussion Sound Module & Metronome

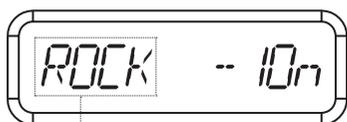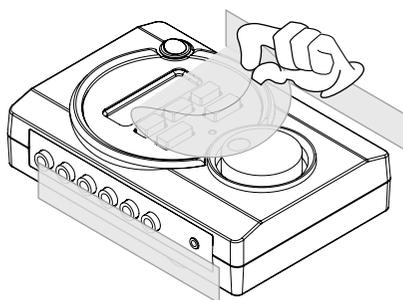

**Drum Styles**

Press these buttons to Select a Drum Style. The Selected Drum Style will be displayed on the left side of the Sound Module's screen; the picture of the Sound Module, above, displays Selection of ROCK Style. When the Sound Module is turned on, the setting will default to ROCK Style.

**Available Drum Styles: ROCK/ JAZZ/ METAL/ BLUES/ POWER/ TECHNO/ MARCH/ LATIN/ TAIKO/ TIMBALE/ FUSION**

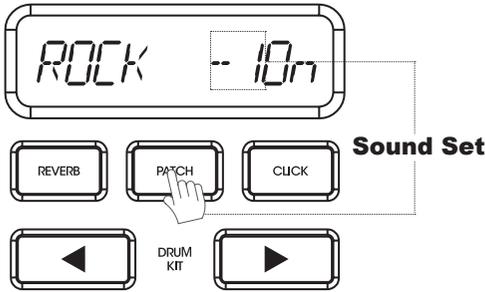


Press this button to Select a Sound Set for the current Drum Style. There are up to 4 Sound Sets per Drum Style. TECHNO, MARCH, and TAIKO Styles only have 1 Sound Set. The Selected Sound Set Number will be displayed to the right of a hyphen on the right side of the screen; the picture of the Sound Module, above, displays Selection of Sound Set 1. When the Sound Module is turned on, the setting will default to Sound Set 1.

### DRUM VOICE LIST

<b>ROCK</b>	1 2 3 4	<b>POWER</b>	1 2 3 4	<b>TAIKO</b>	1
<b>JAZZ</b>	1 2 3 4	<b>TECHNO</b>	1	<b>TIMBALE</b>	1 2
<b>METAL</b>	1 2 3 4	<b>MARCH</b>	1	<b>FUSION</b>	1 2 3 4
<b>BLUES</b>	1 2 3 4	<b>LATIN</b>	1 2 3		




Refer to the Styles & Sounds List page for specific percussion sounds.


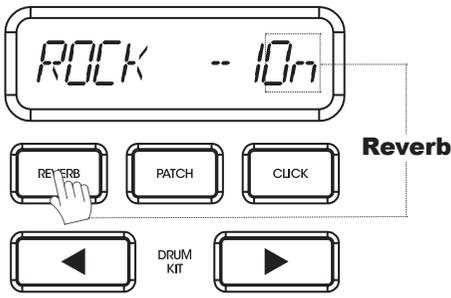


Press this button to Toggle Reverb On or Off. The function of Reverb is to simulate the component of sound that results from reflections from surrounding walls or objects, like an echo. An **On** will be displayed to the right of the Sound Set Number to designate Reverb On. If the Sound Module's screen only displays a Drum Style and a Sound Set, this designates Reverb Off. When the Sound Module is turned on, the setting will default to Reverb Off.


# Metronome

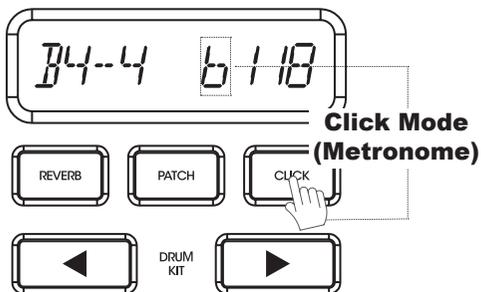

Press this button to Switch to the Metronome Display, above, and Turn On the Metronome. While the Metronome Display is shown, press this button again to Turn Off the Metronome. If the Metronome is not Turned Off nor its settings adjusted, the Metronome Display will eventually revert back to the Drum Style & Sound Set Display, and the Metronome will continue to play.

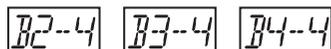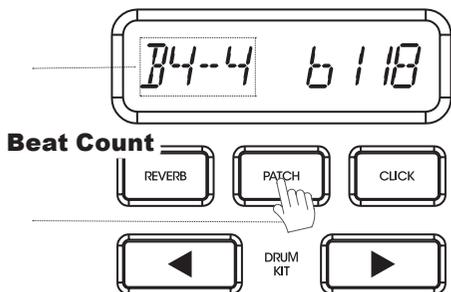

Press this button to Select the Metronome's Beat Count. The picture of the Sound Module, above, displays Selection of Beat Count 3/4. When the Sound Module is turned on and Switched to Metronome, the setting will default to Beat Count 4/4.

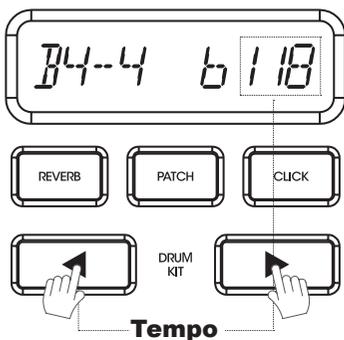

Press these buttons to Adjust the Tempo of the Beat Count. The Tempo will be displayed as a 3 digit number, with a minimum of 30 and a maximum of 250; the picture of the Sound Module, above, displays a Tempo of 118. When the Sound Module is turned on and Switched to Click Mode, the setting will default to a Tempo of 120.

<b>Audio Sampling Frequency</b>	16bit 44.1kHz WAV
<b>Maximum Polyphony</b>	32 notes
<b>Voices</b>	11 Categories, 168 high sound quality audio
<b>Drum kits</b>	32 preset drum modes
<b>Sensor</b>	128 level ultra realistic velocity sensor
<b>Effect</b>	Reverb
<b>Metronome</b>	30-250 BPM, 3 kinds of beats
<b>Wiring Terminal</b>	LINE IN(3.5 Stereo), PHONES(3.5 Stereo), MIDI OUT(5-pin DIN), DC IN(AC adaptor)
<b>Connectors</b>	Hi-Hat, Snare, Tom1, Tom2, Tom3, Cymbal1, Cymbal2, Bass Drum, H.H.Ctrl, Bass Ctrl
<b>Power</b>	DC 5V1A
<b>Dimensions</b>	17.5(W)x12(D)x5.5(H)cm



# Styles & Sounds List

	1	2	3	4	5	6	7	8	
ROCK	1	HI-HAT	SNARE	TOM1	TOM2	TOM3	CRASH1	CRASH2	BASS
	2	HI-HAT	SNARE	TOM1	TOM2	TOM3	CRASH1	RIDE BELL	BASS
	3	HI-HAT	SNARE	TOM1	TOM2	SIDE STICK	CRASH1	RIDE CYMBAL	BASS
	4	HI-HAT	SNARE	TOM1	TOM2	TOM3	CRASH1	CHINA	COWBELL
JAZZ	1	HI-HAT	SNARE	TOM1	TOM2	TOM3	CRASH1	CRASH2	BASS
	2	HI-HAT	SNARE	TOM1	TOM2	TOM3	CRASH1	RIDE BELL	BASS
	3	HI-HAT	SNARE	TOM1	TOM2	SIDE STICK	CRASH1	RIDE CYMBAL	BASS
	4	HI-HAT	SNARE	TOM1	TOM2	TOM3	CRASH1	CHINA	COWBELL
METAL	1	HI-HAT	SNARE	TOM1	TOM2	TOM3	CRASH1	CRASH2	BASS
	2	HI-HAT	SNARE	TOM1	TOM2	TOM3	CRASH1	RIDE BELL	BASS
	3	HI-HAT	SNARE	TOM1	TOM2	SIDE STICK	CRASH1	RIDE CYMBAL	BASS
	4	HI-HAT	SNARE	TOM1	TOM2	TOM3	CRASH1	CHINA	COWBELL
BLUES	1	HI-HAT	SNARE	TOM1	TOM2	TOM3	CRASH1	CRASH2	BASS
	2	HI-HAT	SNARE	TOM1	TOM2	TOM3	CRASH1	RIDE BELL	BASS
	3	HI-HAT	SNARE	TOM1	TOM2	SIDE STICK	CRASH1	RIDE CYMBAL	BASS
	4	HI-HAT	SNARE	TOM1	TOM2	TOM3	CRASH1	CHINA	COWBELL
POWER	1	HI-HAT	SNARE	TOM1	TOM2	TOM3	CRASH1	CRASH2	BASS
	2	HI-HAT	SNARE	TOM1	TOM2	TOM3	CRASH1	RIDE BELL	BASS
	3	HI-HAT	SNARE	TOM1	TOM2	SIDE STICK	CRASH1	RIDE CYMBAL	BASS
	4	HI-HAT	SNARE	TOM1	TOM2	TOM3	CRASH1	CHINA	COWBELL
TECHNO		HI-HAT	SNARE	TOM1	TOM2	SHOUT	SCRAPE	BEEP	BASS
MARCH		HI-HAT	SNARE	TOM1	TOM2	TOM3	CRASH1	CRASH2	BASS
LATIN	1	RATTLE	LOW CONGA	OPEN HIGH CONGA	FLOOR CONGA	MUTE HIGH CONGA	HIGH WOOD BLOCK	COWBELL	BASS
	2	RATTLE	LOW CONGA	OPEN HIGH CONGA	FLOOR CONGA	HIGH WOOD BLOCK	CRASH1	RIDE BELL	BASS
	3	RATTLE	SIDE CONGA	OPEN HIGH CONGA	FLOOR CONGA	COWBELL	CRASH1	RIDE CYMBAL	BASS
TAIKO		HI-HAT	SNARE	TOM1	TOM2	TOM3	CHINA1	CHINA2	BASS
TIMBALE	1	HI-HAT	CONGA	HIGH TIMBALE	LOW TIMBALE	MUTE HIGH CONGA	SPLASH CYMBAL	RIDE CYMBAL	BASS
	2	HI-HAT	SIDE STICK	HIGH TIMBALE	LOW TIMBALE	COWBELL	SPLASH CYMBAL	RIDE CYMBAL	BASS
FUSION	1	HI-HAT	SNARE	TOM1	TOM2	TOM3	CRASH1	CRASH2	BASS
	2	HI-HAT	SNARE	TOM1	TOM2	TOM3	CRASH1	RIDE BELL	BASS

**ddrum®**

For more information please visit our website

**[www.ddrum.com](http://www.ddrum.com)**