

FIRMWARE UPDATE INSTRUCTIONS

When the firmware update begins, the computer will show the following:

```

C:\Windows\system32\cmd.exe
C:\Users\m11_chuzonghui\Desktop\DDTi_20211230A_v1.0:update -f DDTi_460_V1.bin
Ver 1.4
Subkey 0 ValueCount 2
[DDTI DUMS]
Version inquiry
Res error
Version inquiry
[0 0 1 176 0]
Version inquiry
Enable update in mode 1

update frame 93 of 238
update frame 94 of 238
update frame 95 of 238
update frame 96 of 238
update frame 97 of 238
update frame 98 of 238
update frame 99 of 238
update frame 100 of 238
update frame 101 of 238
update frame 102 of 238
update frame 103 of 238
update frame 104 of 238
update frame 105 of 238
update frame 106 of 238
update frame 107 of 238
update frame 108 of 238
update frame 109 of 238
update frame 110 of 238
update frame 111 of 238
update frame 112 of 238
update frame 113 of 238
update frame 114 of 238
update frame 115 of 238
update frame 116 of 238
update frame 117 of 238
update frame 118 of 238
update frame 119 of 238
update frame 120 of 238
update frame 121 of 238
    
```

Once the DDTi has completed the firmware update, the display will show the following:



FIRMWARE UPDATE INSTRUCTIONS

Firmware updates for the DDTi will be available at www.ddrum.com. These include any updates made to the software, whether its for function, performance or any reported issues.

STEP 1: Connect the power supply to the DDTi and turn it on.

STEP 2: Using the USB cable included, connect the DDTi your computer. Your computer will recognize the DDTi and no drivers are needed.

STEP 3: Press the up function and down value buttons at the same time until the screen displays “U.P.” The DDTi is now in firmware update mode. Please refer to the pictures below.



STEP 4: Open the firmware file listed at www.ddrum.com. Run the update and the DDTi will automatically start the process. The update will close after the update has been completed.